

INDEX OF HM-004 SPARE PART



Main blade holder set

HM-004-Z-01



Rotor head ring

HM-004-Z-02



Guiding ring

HM-004-Z-03



Main gear

HM-004-Z-04



Tail motor

HM-004-Z-05



Short tiebar

HM-004-Z-06



Skid landing

HM-004-Z-07



Tail gear

HM-004-Z-08



Main rotor blade

HM-004-Z-09



Long tiebar

HM-004-Z-10



Servo connecting rod

HM-004-Z-11



Bearing of rotor head core

HM-004-Z-12



Tail bearing

HM-004-Z-13



Rotor Head

HM-004-Z-14



 
Main motor

HM-004-Z-15




Canopy

HM-004-Z-16

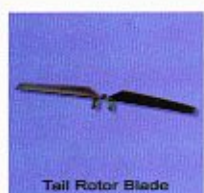

Tail Rotor Blade

 HM-004-Z-17

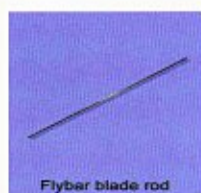

Flybar blade rod

HM-004-Z-18



Tail Holder

HM-004-Z-19



Tail boom

HM-004-Z-20



Swashplate

HM-004-Z-21



Flybar paddle

HM-004-Z-22



 
Tail knighthead

HM-004-Z-23



Battery holder

HM-004-Z-24

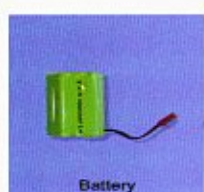

Battery

HM-004-Z-25



9g servo-4

HM-004-Z-26



Main frame

HM-004-Z-27



 
Receiver

HM-004-Z-28



Charger

HM-004-Z-29

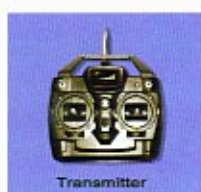


Transmitter

HM-004-Z-30



Crystal oscillator

 HM-004-Z-31

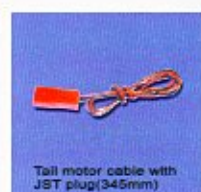

Tail motor cable with JST plug(345mm)

HM-004-Z-32

Please use WALKERA original accessories as your spare parts. Non originals may make poor your R/C aircraft flight performance and flight security.